TRANE CleanEffects¹¹¹

is the first central air system that removes up to 99.98% of allergens from all the air it heats or cools.

See how to dear the air in your home. ≡






URRENT HOUSE PROJECT

HIS OLD HOUSE CLASSICS ASK THIS OLD HOUSE

ABOUT THE SERIES
ASK A QUESTION
Q+A ARCHIVE
TV SCHEDULE
SHOW DESCRIPTIONS
RESOURCES
BIOGRAPHIES
UNDERWRITERS
FAQS

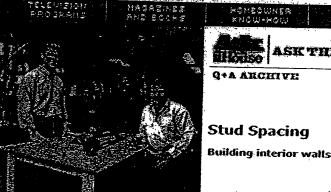

RELATED ARTICLES

Simple Stud Finder Tactic for Toenailing Finding Storage Between the Studs

ASK A QUESTION .

PRINT THIS # E-HAIL THIS #

SEARCH O+P ARCHIVE

60


Q: My house was built in 1950, and its exterior walls are made of cement block. When I removed some interior walls while renovating the bedroom, I noticed that the studs were spaced 24 inches on center. When I install new walls, should I keep that spacing? I plan to cover them with drywall.

ask this old house

— Brad, East Peoria, IL

A: Tom Sitva replies: Codes generally allow 24-inch on-center spacing for studs in interior nonbearing walls, and under certain circumstances even for load-bearing walls. But I don't see why you'd want do it, even if you can. You don't save much money in materials or much time in installation, and the finished wall is likely to flex if you lean on it. I build interior walls with 2x4 studs spaced 16 inches on center and cover them with at least \(\frac{1}{2} \)-inch-thick drywall. They're stiffer and more solid-feeling than anything built with 24-inch spacing.



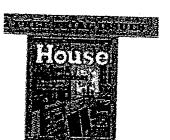



ew Homeowner's Guide ≥
utdoor Living ≥
nd Your Energy Leaks ≥
attling Indoor Air Pollution ≥
nline Video Library ≥
is Old House Community ≥
≥e All Special Features ≥



Watch
Bat
Ret
With Pa
Monda
only c

EXHIBIT C

Click on any logo for show info

ONTACT US

DISCUSSION FORUMS

E-MAIL NEWSLETTER

FEEDBACK







COPYRIGHT @ 2005 THIS C A TIME4 MEDIA COMPA REPRODUCTION IN WHOLE OR IN PART WITHOUT PI